


Quick Reference

Model Auto 216A/219A

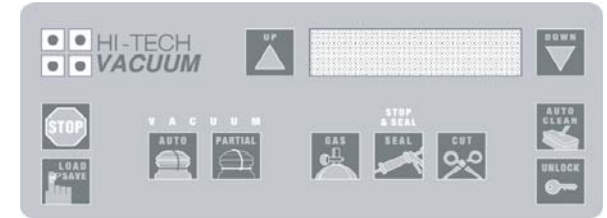

Selecting Auto vacuum mode



The AUTO vacuum mode is automatically selected when the unit is ON.

Selecting and setting a Partial vacuum mode



+



+



or



+



On the READY status of the unit:

1. Press UNLOCK to unlock the keypad.
2. Press PARTIAL vacuum key, an arrow will blink at the VAC setting.
3. Press UP or DOWN to adjust the partial vacuum. The maximum level you can reach is 95% and the minimum is 0% of vacuum.
4. Press STOP to confirm your settings and lock the keypad.

Adjusting the Seal



+



+



or



+



On the READY status of the unit:

1. Press UNLOCK to unlock the keypad.
2. Press SEAL key, an arrow will blink at the SEAL setting. The maximum level you can reach is 9.5 and the minimum is 0.
3. Press UP or DOWN to adjust the partial vacuum.
4. Press STOP to confirm your settings and lock the keypad.

Adjusting the Gas



+



+



or



+



On the READY status of the unit:

1. Press UNLOCK to unlock the keypad.
2. Press GAS key, an arrow will blink at the GAS setting. The maximum level you can reach is 50% and the minimum is 0 (which means no gas injection).
3. Press UP or DOWN to adjust the gas level.
4. Press STOP to confirm your settings and lock the keypad.


Loading a setting from the memory



On the READY status of the unit:

1. Press UNLOCK to unlock the keypad.
2. Press SAVE/LOAD key, to load a memorized settings. Your settings will appear on the screen as well as the number of your memory choice.
3. Press SAVE/LOAD again to load another memorized settings.
4. Press STOP to select your memorized settings and lock the keypad.

Saving a setting to the memory

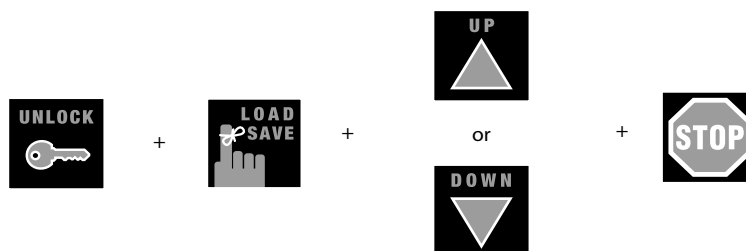

Select your vacuum mode and adjust the partial vacuum, seal and /or gas as steps 1,2 and 3 mentioned above.

4. Press SAVE/LOAD key to save your settings.
5. Press UP or DOWN to select the memory choice number in which you want to keep your settings. The number of your memory choice will appear on the bottom right side of the screen. You can memorize up to 25 different settings.
6. Press SAVE/LOAD again to save your settings and lock the keypad. Press STOP if you don't want to save any settings.

Performing an Autoclean process



On the READY status of the unit:

1. Press UNLOCK to unlock the keypad.
2. Press AUTOCLEAN key
3. Close the lid.
4. The autoclean process will start and the pump will run for 10 minutes.
5. The autoclean process ends automatically.

Quick Seal



At any time during a vacuum process, pressing the STOP key will immediately stop the process in action and will release air inside the chamber.

Quick Stop




At any time during a vacuum process, pressing the SEAL key will stop the vacuum process and immediately performs the sealing process.




ALWAYS DISCONNECT THE UNIT FROM THE ELECTRICAL OUTLET BEFORE OPENING THE PANEL.


1- Open the back panel (key or socket 5/16).

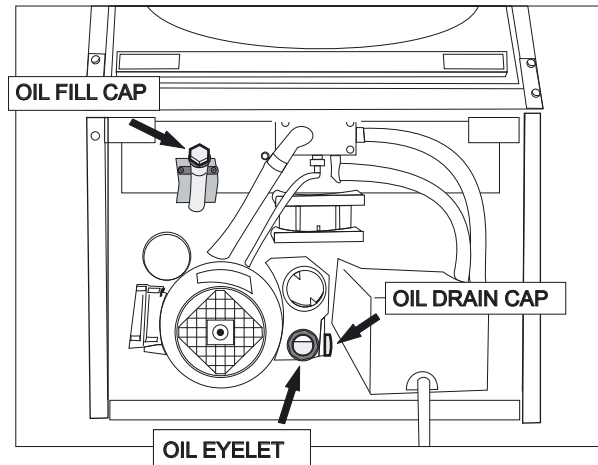

2- Open the drain cap and drain the old oil

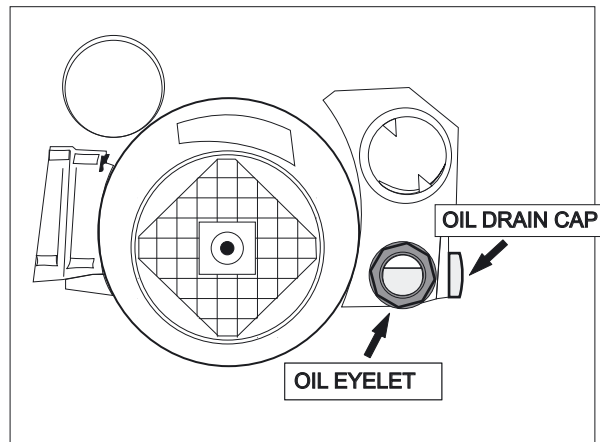

3- Fill with Busch R-580 oil (the oil level **should not be higher** than 3/4 of the oil eyelet).

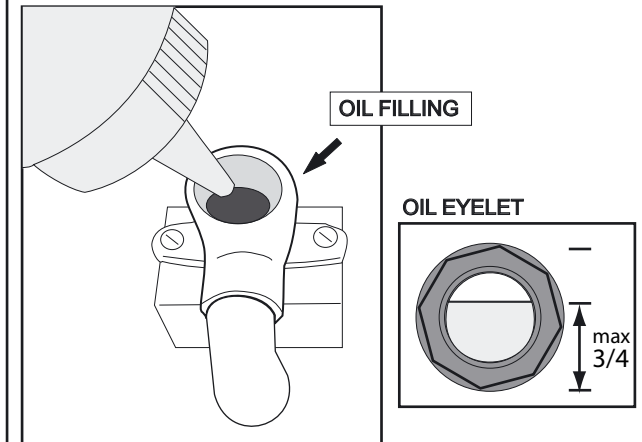

Please refer to the pump manual for other pump maintenances.

Note: The photos above might look different from your model.