



USER'S QUICK REFERENCE

NEL MODELS



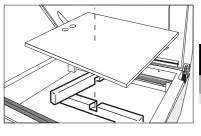


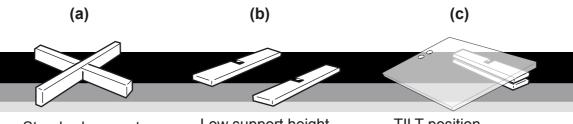


Standard support height

Low support height Remove completely if nedded


TILT position
Useful for packaging liquids

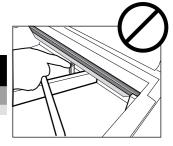


OPERATION

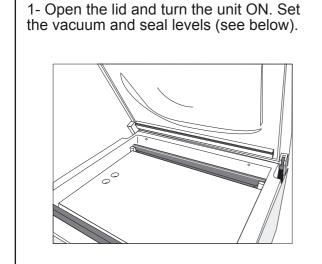

2- Lay the pouches on the shims and align their opening along the sealing cushion.

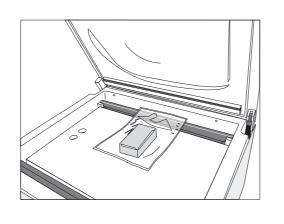

3- Start the packaging cycle by closing the lid (hold the lid closed until you feel a suction).

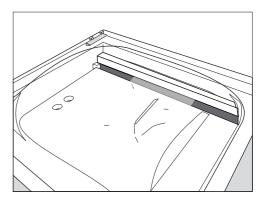


CONTROLS

Note: Turning the unit OFF at any time during the cycle, then turning it ON after 3 seconds: this will **RESET** the unit.

Main switch —

This is the main power switch of the unit.

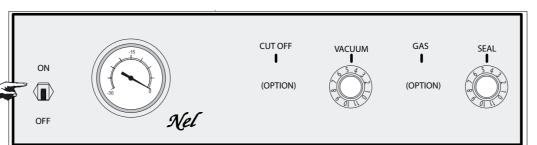

VACUUM LEVELS

0 to 5

= period of 2 to 45 seconds

@ vacuum level of 10 to 90%

5 to 11

= period of 45 to 90 seconds

@ vacuum levels of 100%

* Higher settings for porous materials such as meat)

SEAL LEVELS

SET to 5 for standard bags.

* Higher settings for thicker bags.





OIL CHANGE QUICK REFERENCE


NEL 216/219 MODELS



ALWAYS DISCONNECT THE UNIT FROM THE ELECTRICAL OUTLET BEFORE OPENING THE PANEL.

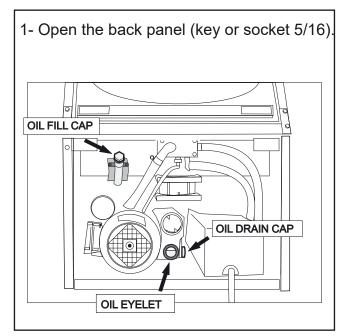

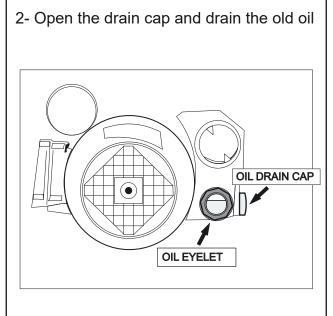

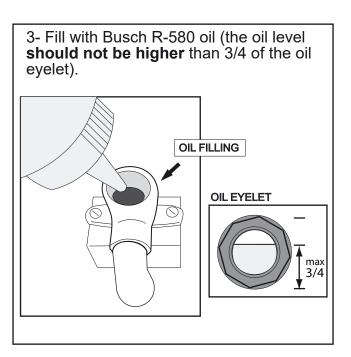

Please refer to the pump manual for other pump maintenances.

Note: The illustrations above might look different from you model.